

# K SERIES QUICK PROGRAMMING GUIDE

Use **+** or **-** to move to the first hour you wish to program.

Press **⊙** to scroll between the three modes.

For Economy mode the **☾** icon will appear and one dot will flash. ■

For comfort mode the **☀** icon will appear and two dots will flash. ■■

For Anti-frost mode the **❄** icon will appear and the dot will appear to bounce.

For the radiator to be off no icon will appear and the dot will appear to bounce. (See step 4 for how to to select Anti-frost or off as default.) Repeat this process for each hour you wish to program. To finish the programming press **MENU** or leave the radiator for 30 seconds without pressing any buttons.

## 5. Checking the programming

By repeatedly pressing **MENU** you can see the programming that is saved in the radiator for each day. Pressing only once shows day one, twice shows day two and so on.

## V. Other information

Press **+** & **-** together for 3 seconds to lock the keypad. **🔒**


Press **+** & **-** together for 15 seconds to perform a factory reset & clear programming

**⚡** indicates that the radiator is working.

Pressing **MENU** for 3 seconds while in manual mode will take you to the LCDT contrast screen. The letters **LCdT** will appear.


You can increase the contrast by pressing **+** and decrease it by pressing **-**

# K SERIES QUICK PROGRAMMING GUIDE

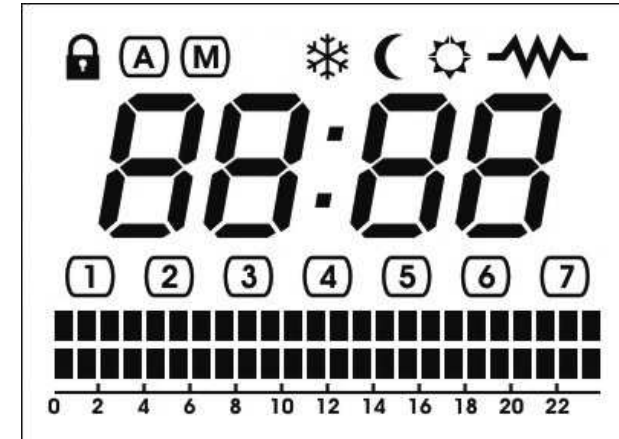

- I. Front panel buttons.....01
- II. Setting the time & day.....02
- III. Manual operation: Setting the temperature.....02
- IV. Automatic operation: 1. The modes: Anti-frost, Economy & Comfort.....02
- 2. Setting the temperature for Comfort & Economy modes.....03
- 3. Selecting the days for programming.....03
- 4. Selecting the hours.....03
- 5. Checking the programming.....04
- V. Other information.....04

## I. Front panel buttons

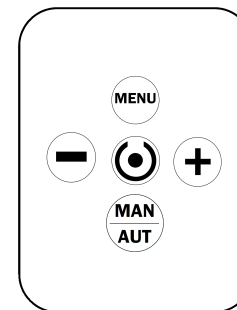

- ⊙** ON/OFF
- MENU** Menu
- +** Increase temp. / day / time
- Decrease temp. / day / time
- MAN/AUT** Manual / Automatic mode



# K SERIES QUICK PROGRAMMING GUIDE

## II. Setting the time & day




88:88

Press  for 3 seconds.

The clock starts at midnight, represented by 00:00 (24 hour clock).

Use  or  to move to the correct hour

Press  and use the  or  to move to the correct minute

Press  and use the  or  to move to the correct day



Day indicators (Mon to Sun)       

Press  to finish

## II. Manual operation: Setting the temperature

Ensure that the function indicator displays  If  is visible press  once.


Use  or  to select the desired temperature



The mode will change automatically depending on the temperature you select.


## IV. Automatic operation


### 1. The modes: Anti-frost, Economy & Comfort



Ensure that the function indicator displays 

If  is visible press  once. The radiators have three temperature modes.

 Economy mode 15° to 19.5°

 Comfort mode 20° to 30°

 Anti-frost mode 8°


To use Anti-frost mode whenever the radiator is not functioning in Comfort or Economy


mode press  To de-activate anti-frost mode press 


Steps 2, 3 & 4 must be completed consecutively. If you exit programming mode during the process begin again at step 2.



## 2. Setting the temperature for Eco & Comfort mode




Ensure that the function indicator displays 



Press  for 3 seconds

The Comfort mode indicator will flash 








Use  or  to move to the desired temperature. This will be the temperature whenever you choose Comfort mode in the programming.


Press  once.



The Economy mode indicator will flash 


Use  or  to move to the desired temperature. This will be the temperature whenever you choose Economy mode in the programming.



 
## 3. Selecting the days for programming

Press  the day indicators will start flashing and the display will flash SEL 1.

You can move through the days by using  or  and the text will change SEL 1, SEL 2, SEL 3.....SEL,7.


Press  to select a day. Its icon will stop flashing. More than one day can be selected.

Use  or  to move across to the relevant day and  to select it.

Once you have selected all the days that will share a common program you are ready to set the mode for each hour that you want the radiator to heat.

## 4. Setting the hours



Press 

The clock starts at midnight, represented by 0 (24h clock).